PROCEDURE FOR MAKING A EYE SPLICE
TERMINAL IN A CONTROL CABLE

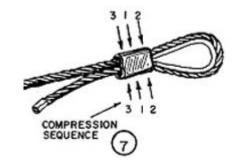① CUT CABLE TO APPROXIMATE LENGTH

② SLIP ON - SLEEVE

③ FORM LOOP THRU SLEEVE

THIMBLE

CUT
SHARP
POINTS
OFF

④ INSERT THIMBLE IN FORMED LOOP

⑤ SLIDE SLEEVE UP AGAINST THIMBLE

⑥ USE COMPRESSION TOOL

3 1 2

3 1 2

COMPRESSION
SEQUENCE
⑦

⑧ COMPLETED CABLE TERMINAL